

 
Flexamatic Burnisher Head



MODELS: 8.631-213.0 (Burnisher Head)

Operating Instructions (ENG)

8.631-214.0 (Burnishing Pad)

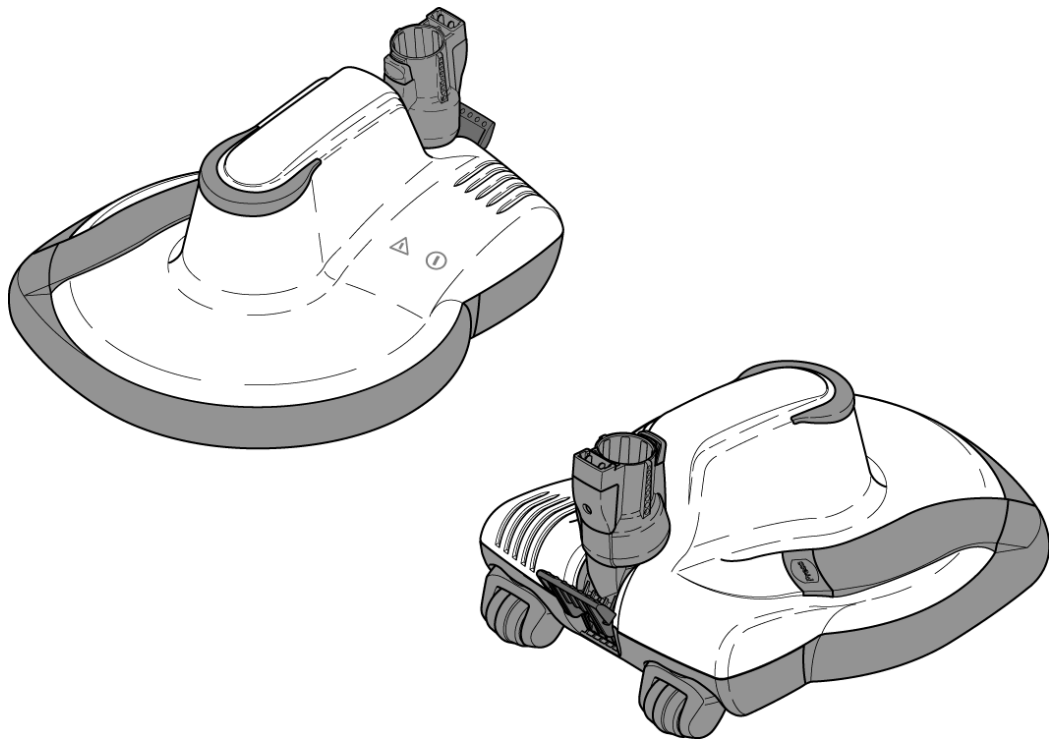

Read instructions before operating the machine.

TABLE OF CONTENTS

<i>Table Of Contents.....</i>	<i>2</i>
<i>Important Safety Instructions.....</i>	<i>3</i>
<i>Technical Specifications.</i>	<i>4</i>
<i>How This Machine Works.....</i>	<i>4</i>
<i>Components</i>	<i>4</i>
<i>Assembly</i>	<i>5</i>
<i>Precaution And Floor Protection.....</i>	<i>5</i>

OPERATIONS

<i>First Cleaning.....</i>	<i>6</i>
<i>Using Your Burnisher.....</i>	<i>6</i>
<i>LED-Display.....</i>	<i>6</i>
<i>Floor Pads</i>	<i>7</i>

MAINTENANCE

<i>Changing The Floor Pad</i>	<i>8</i>
<i>Removing Blockage.....</i>	<i>9</i>

<i>PARTS.....</i>	<i>10</i>
-------------------	-----------

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution must always be followed, including the following:



READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE.

To reduce the risk of fire, electric shock, or injury: Use only indoors. Do not use outdoors or expose to rain.

Use only as described in this manual. Use only manufacturer's recommended components and attachments.

If the machine is **not working properly**, has been dropped, damaged, left outdoors, or dropped into water, return it to an authorized service center.

Do not operate the machine with any openings blocked. Keep openings free of debris that may reduce airflow.

Machine can cause a fire when operating near flammable vapors or materials. Do not operate this machine near flammable fluids, dust or vapors.

For cleaning dry hard floors only. **Do not use on wet floor.**

Do not expose the machine to liquid, moisture or heat.

Do not touch the floor pad or drive while the machine is running.

Do not use machine without floor pad.

Do not use outdoors or on inappropriate surfaces, e.g stone or concrete.

Before using machine, remove all sharp and abrasive materials (i.e. grit and sand) with a vacuum cleaner.

This machine is suitable for commercial use, for example in hotels, schools, hospitals, factories, shops and offices for more than normal housekeeping purposes.

Maintenance and repairs **must be done** by qualified personnel.

During operation, attention shall be paid to other persons, especially children.

The machine shall only be operated by instructed and authorized persons.

When leaving unattended, unplug the machine.

Do not handle the plug or machine with wet hands.

Do not unplug machine by pulling on cord. To unplug, grasp the plug, not the cord.

Do not use with damaged cord or plug. Follow all instructions in this manual concerning grounding the machine.

Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.

Do not pull/run machine over cord. **Keep** cord away from heated surfaces.

Connect to a **properly** grounded outlet. See Grounding Instructions.

SAVE THESE INSTRUCTIONS

TECHNICAL SPECIFICATIONS


ITEM	DIMENSION/CAPACITY
Motor	200 Watts
Speed	2000 rpm
Floor pad diameter	11.50 inches (294 mm)
Protection	Grounded

HOW THIS MACHINE WORKS

The high speed of the burnisher pad causes the ingredients in the floor maintainer to bond together and form a layer. In this way you achieve a high gloss shine and create a new surface which protects the flooring.


NOTE: All repairs should be performed by an authorized service representative.

COMPONENTS

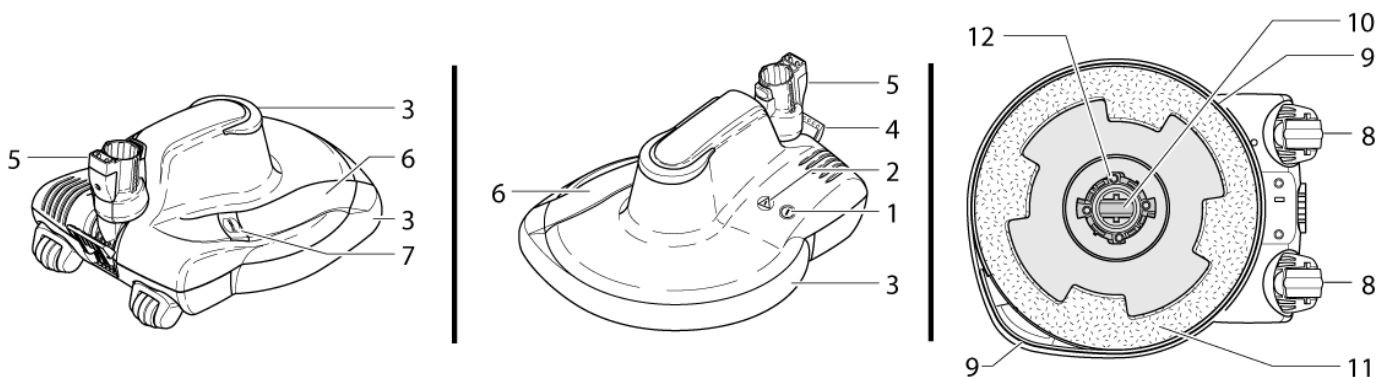


- | | | | |
|----|-------------------------------|-----|----------------|
| 1. | LED – operation light (green) | 7. | Release button |
| 2. | LED – overload light (red) | 8. | Castor |
| 3. | Bumper | 9. | Seal |
| 4. | Foot pedal | 10. | Support castor |
| 5. | Turning swivel neck | 11. | Floor pad |
| 6. | Suction duct access cover | 12. | Pad retainer |


1. Fit the floor pad (11) to the bottom of the burnisher, so that the pad will engage the pad retainer (12).

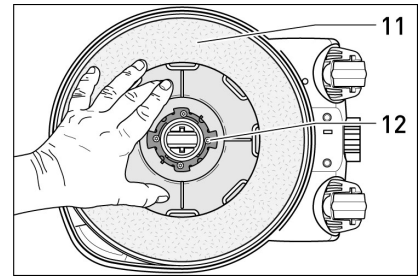

2. Push the floor pad down with one hand against the resistance of the four orange spring-loaded ejector pins. Fit the Quick-release pad holder (13) with the other hand and turn it clockwise until the lever arms click into the floor pad. (11). The Quick-release pad holder is fitted correctly when its lines (22) and the lines on the floor pad (23) coincide.

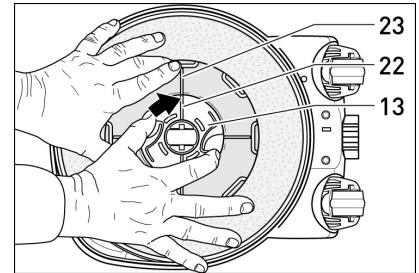

3. Push the telescopic tube (15) of your vacuum(14) onto the swivel neck (5) of your burnisher head.

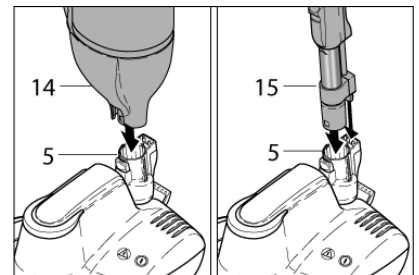

PRECAUTIONS AND FLOOR PROTECTION

- Not suitable for wet or uneven floors.
- Do not operate the burnisher in a stationary position as this may damage the floor.
- Do not operate the burnisher on soft floors.
- Remove as much furniture as possible, and cover any that is left.
- If heavy particles of dirt are not removed before polishing, small stones and grains of sand may damage the floor.
- Do not use on soft vinyl floors which are not properly attached or glued. They can be suctioned up or damaged.


OPERATIONS

NOTE: Follow the safety instructions in the manual that comes with your vacuum.

NOTE: Always check the cleaning and maintenance instructions of your floor manufacturer.



FIRST CLEANING

1. Vacuum your floor thoroughly.
2. Clean your floor with the appropriate cleaning products for floor type.
3. When floor is completely dry you may then proceed.

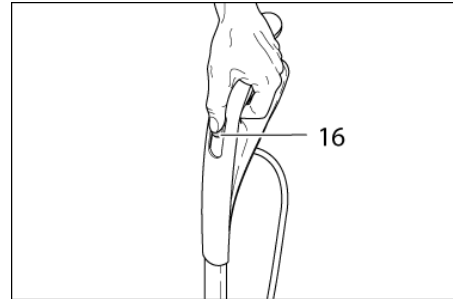

USING YOUR BURNISHER

1. Check to make sure the on/off switch (16) is in the OFF position.
2. Plug the machine into the electrical outlet.
3. Switch the machine on.
4. To start the machine, push the foot pedal (4) down and tilt the handle (15) downward. The burnisher has a soft-start system so there may be a slight delay before it starts.
5. Move the burnisher slowly over the floor in a regular motion.
6. When the finish can no longer be restored repeat the First Cleaning process and then re-polish the floors.

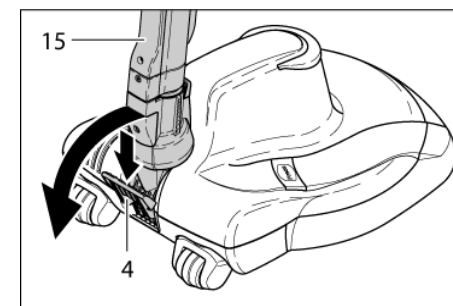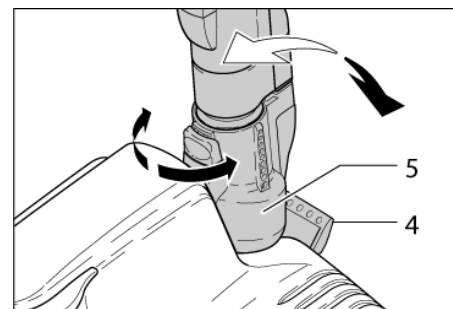


NOTE: Failure to use the foot pedal will cause lasting damage to the machine.

The foot pedal locks the swivel neck (5) in an upright position. In this position the burnisher automatically turns off. The swivel neck has an internal lock which will hold the machine in the central position to avoid unwanted rotation.

LED-Display

The green LED light (1) indicates that the burnisher is operational.

The red LED light (2) comes on if the machine has shut down for safety reasons, for example, overload or clogging. (See Removing Blockage section.)

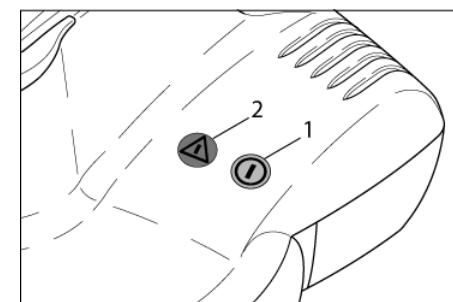

FLOOR PADS

There are three different cleaning pads available to cover applications for your bunisher.

Blue Floor Pad

The blue floor pad is recommended for daily maintenance and will maintain a high gloss on soft coated floors.

Green Floor Pad

The green floor pad is recommended for daily maintenance and will maintain a high gloss finish with a hard surface.

Red and Yellow Floor pad

The red and yellow floor pads are for restoring a gloss finish to worn floor which have a hard surface.

MAINTENANCE

NOTE: Use only genuine Windsor replacement floor pads to ensure performance, longevity and safety.

All repairs should be performed by an authorized Windsor dealer.

⚠ CAUTION:



Check regularly for sharp and abrasive materials. If necessary change the pad, otherwise floor damage may occur.

⚠ WARNING:

Switch off and Unplug machine from electrical outlet before doing any maintenance.

CHANGING THE FLOOR PAD



1. Hold the floor pad with one hand and squeeze the lever arms (24) of the Quick-release pad holder together.
2. Turn the Quick-release pad holder counter-clockwise and remove it.
3. The floor pad (11) will release from the pad retainer (12) and can be removed.
4. Replace with new pad.
5. Clean the underside of the machine and remove any debris.

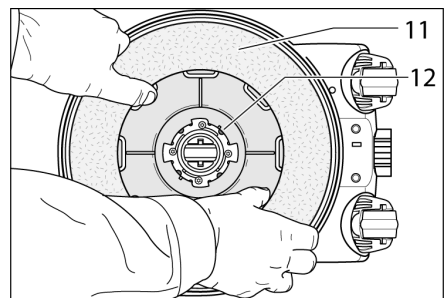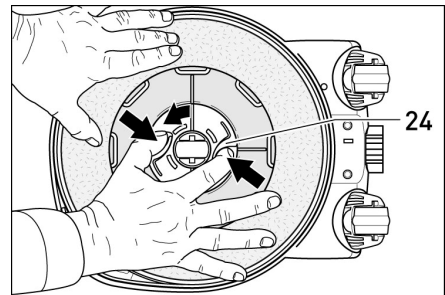


REMOVING BLOCKAGE

1. If there is a blockage, check the pad area (20) first.
2. Remove the floor pad. (See Changing the Floor Pad section).
3. Check the suction duct (21).
4. Push the release button (7) and remove the suction duct access cover (6).
5. Check between the suction duct and the inlet of swivel neck (5) for blockage.

If the vacuum has no blockage, refer to the vacuum cleaner instruction manual.

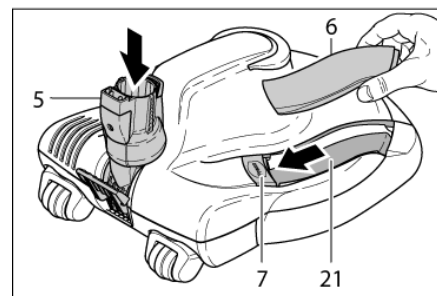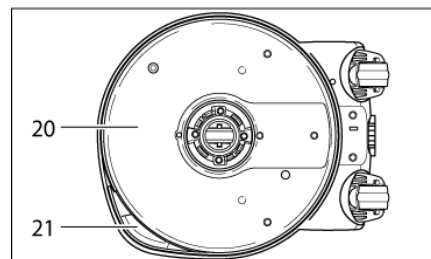

PARTS LIST

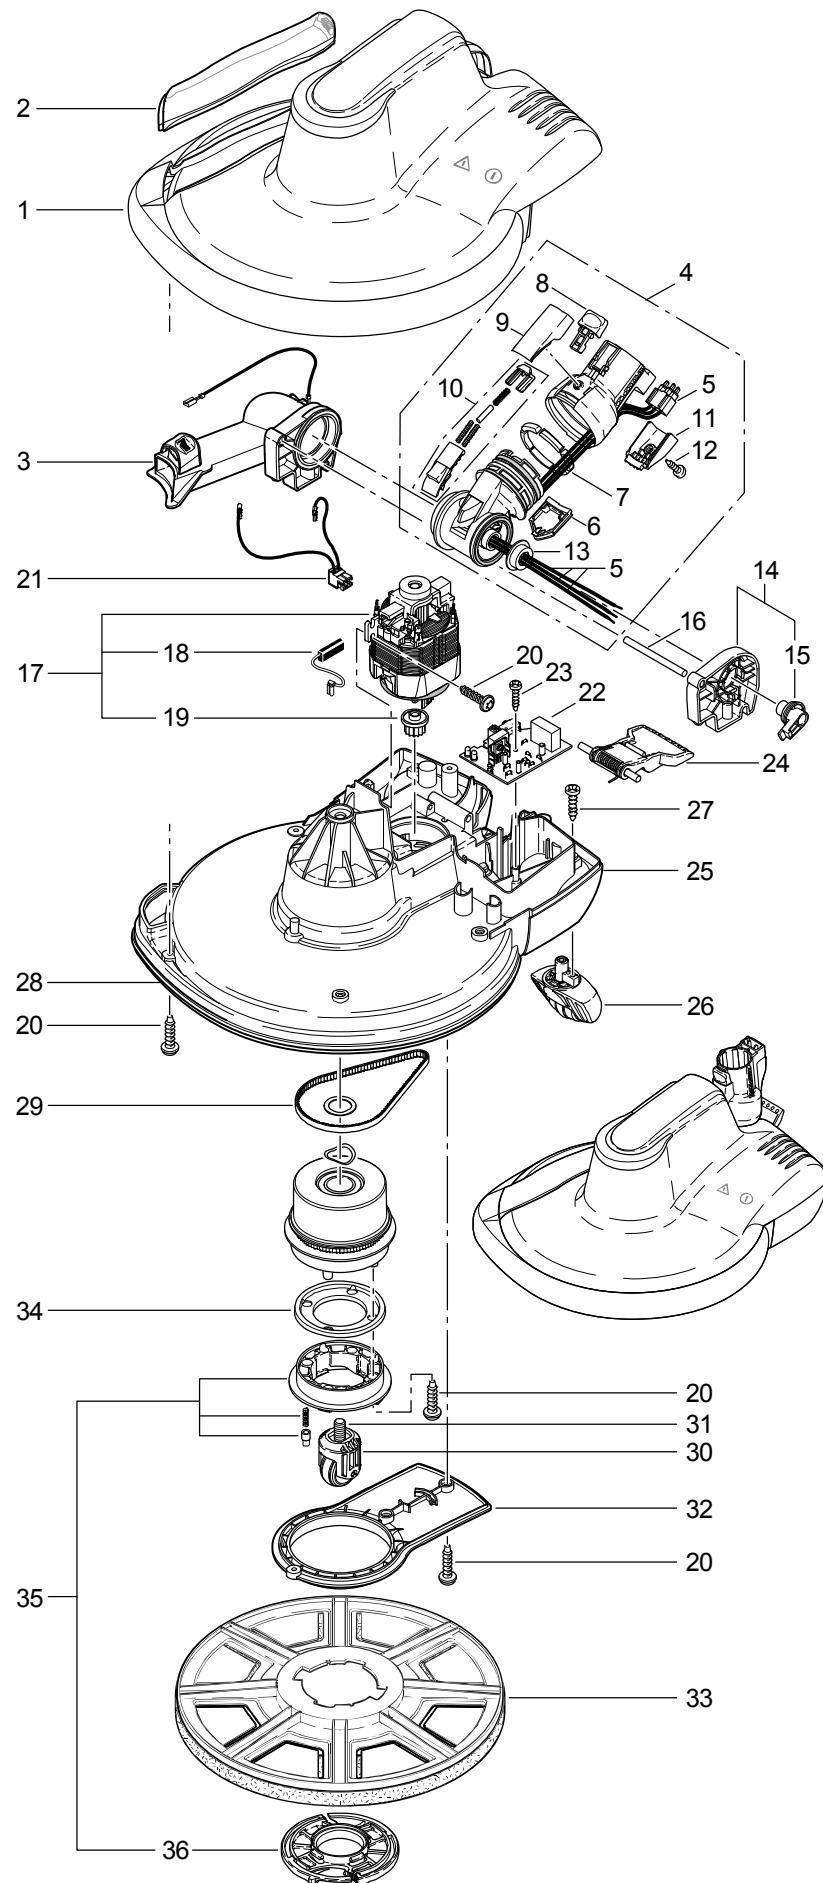

PARTS LIST

POS.	PRV NO.	PRODUCT CODE	DESCRIPTION
1	3204WI	86314610	POWER HEAD COVER
2	3205TG	86314360	SUCTION DUCT ACCESS COVER
3	3258DG	86314370	SWIVEL NECK SUPPORT
4	3227DG	86314380	TURNING SWIVEL NECK
5	3249	86314390	WIRING SWIVEL NECK
6	2947DG	86314400	COVER
7	2950ER	86144990	BEARING SEGMENTS
8	1737DG	86314410	RELEASE BUTTON
9	2952DG	86314420	BUTTON COVER
10	2945DG	86314430	SWIVEL NECK SLIDE
11	2951DG	86314440	SOCKET COVER, TS-NECK
12	01027ER	86144820	SCREW F 3,9X9,5 DIN7981
13	2954	86138140	SWIVEL NECK BEARING
14	3257ER	86314450	SWIVEL NECK SUPPORT L.H.
15	3238	86314460	SWITCH LEVER
16	2938ER	86314470	AXLE HSB
17	3252ER	86314480	MOTOR 120V CPL HSB
18	05141S	86138390	PAIR OF CARBON BRUSHES
19	3222	86314490	MOTOR PULLEY HSB
20	01016ER	86144780	SCREW
21	3245	86314500	INTERNAL CABLE
22	3242ER	86314510	PRINTED CIRCUIT BOARD 120V
23	01029ER	86321410	SCREW C 2,9X13
24	2937OR	86141710	FOOT PEDAL
25	3201DG	86314520	CHASSIS HSB
26	3254DG	86314530	REAR CASTOR
27	0102	86147030	SCREW F 3,9X13 DIN 7981
28	3268ER	86314540	SEALING STRIP
29	3221	86314550	DRIVE BELT HSB
30	3220ER	86314560	CENTER CASTOR
31	01033ER	86314570	SCREW, M10X25 DIN 7991
32	3202DG	86314580	BELT DRIVE COVER
33	3230WI00	86312140	BLUE FLOOR PAD
-	3230WI30	86320520	DIAMOND PAD GREEN FINE ABRASION
-	3286WI40	86320530	DIAMOND PADS RED/YELLOW COMBO PACK
34	3219	86314590	SEAL HSB
35	3281NE	86314600	PAD ADAPTOR CPL
36	3280	86321420	PAD HOLDER QUICK RELEASE

